




Factory Five Racing, Inc.

Part Number: <u>12288</u>	Revision: <u>C</u>	Effective Date: <u>1/18/11</u>	By: <u>J. INGERSLEV</u>
Document Type (indicate):			
<input type="radio"/> Bill of Material	<input type="radio"/> Drawing (may be attached)	<input type="radio"/> Specification	
<input checked="" type="radio"/> Assembly Instructions	<input type="radio"/> Operating Procedure	<input type="radio"/> Other	

Sun Visor Assembly Installation Instructions

I. Parts Included in Kit

12042	SUN VISOR, SMOKE, W/MOUNTING HARDWARE, PAIR	EA	1.00
12288	SUN VISOR INSTRUCTIONS	EA	1.00
13605	SUN VISOR PLASTIC	EA	2.00
13606	SUN VISOR BRACKETS	EA	1.00
13607	SUNVISOR FASTENERS	EA	1.00

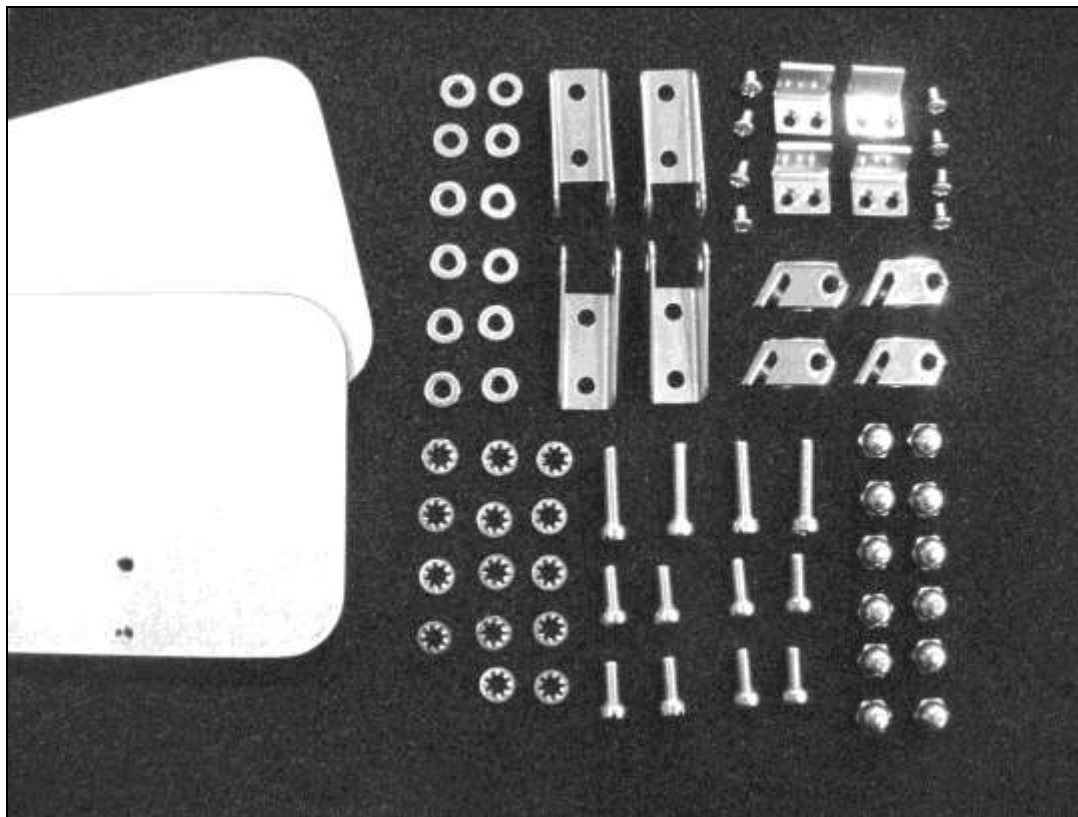

Tools Required

- $\frac{3}{32}$ " Hex key
- $\frac{3}{8}$ " Wrench
- Flat head screwdriver

Philips screwdriver
Loctite™

III. Installation Instructions


Peel the backing paper off the Sun visors.

Assemble the hinges using the longer screws, washers, lock washers and acorn nuts.




Attach the hinges to the sun visor using the shorter screws along with the flat washers, lock washers and acorn nuts. Use a small amount of Loctite™ on these screws because they can work loose over time from positioning of the visors.


- 👉 Be careful not to get any Loctite™ on the plastic, it will form a haze that will not come off.
- 👉 Be careful not to crack the visors by over tightening the screws.

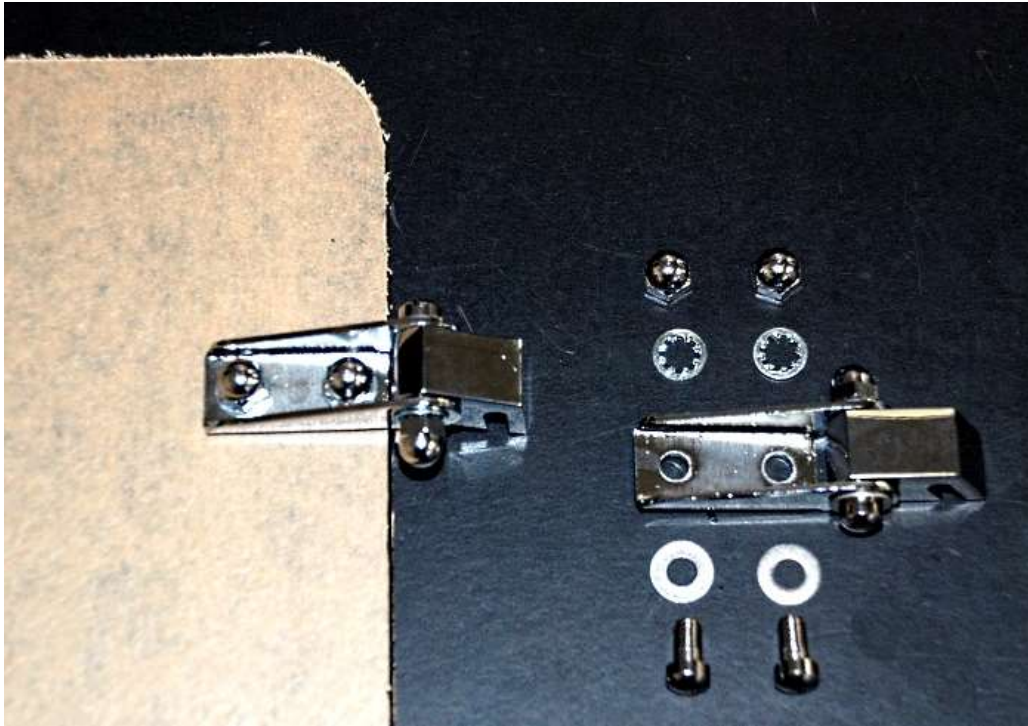

Mount the four angled clips to the top of the windshield with the tops pointing up and towards the rear of the car using the small countersunk screws.

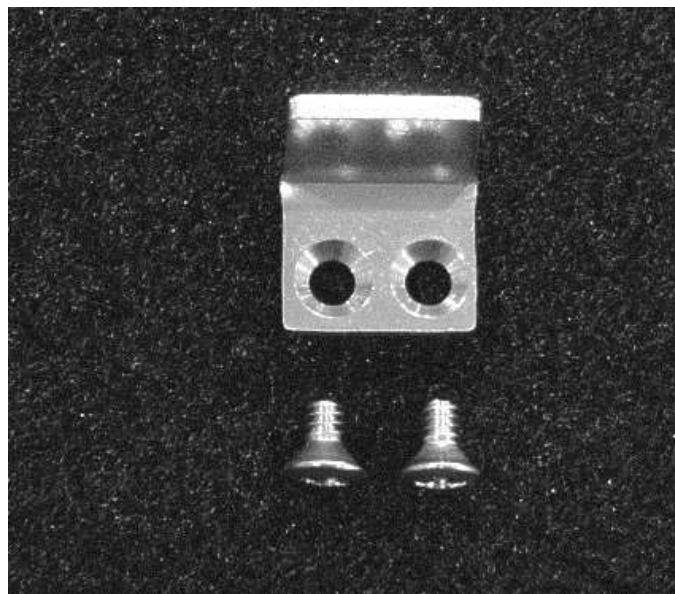

Note: These countersunk screws come very close to the glass and sometimes need to be trimmed slightly in order to avoid pinching/cracking the windshield glass.

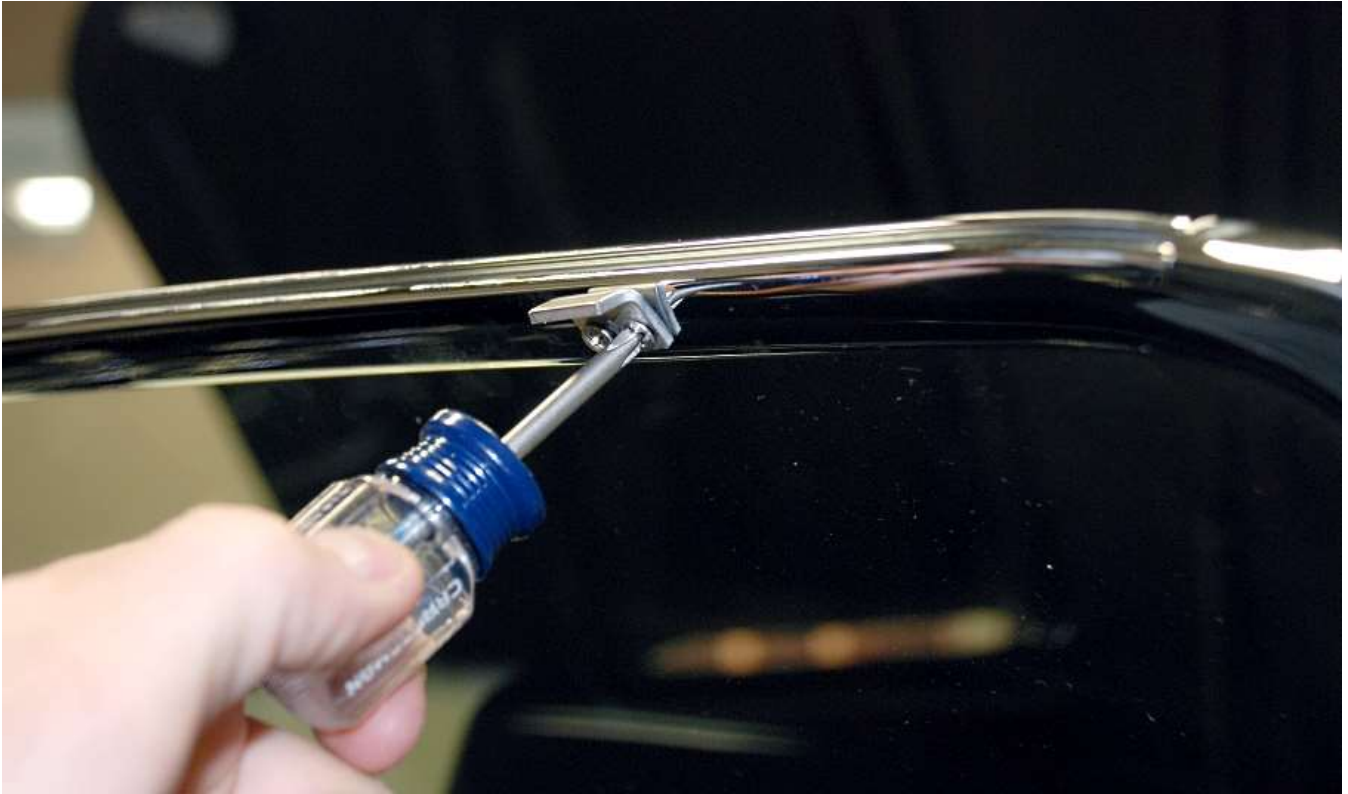

Slide the sun visors onto the brackets and tighten the pedestals with the $\frac{3}{32}$ " hex key.

